



# BC 750 S4 – Anbausätze / fitment kits


## Mercedes-Benz Sprinter

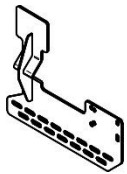


**kurz / short**  
AWD + RWD  
wheelbase 3665 mm  
+ twin wheels or  
4325 mm




**mittel / middle**  
AWD + RWD  
wheelbase 3665 mm  
or 4325 mm



**lang / long**  
All Sprinters possible




**kurz Hülse / short**  
AWD + RWD  
wheelbase 4325 mm +  
single wheels




**mittel Hülse / middle**  
AWD + RWD  
wheelbase 3665 mm /  
4325 mm or single wheels


## Volkswagen Crafter / MAN TGE

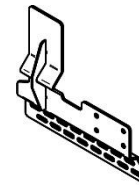


**kurz / short**  
single wheels

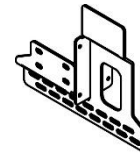

**lang / long**  
single wheels

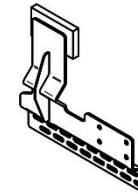


**kurz Do / short**  
twin wheels

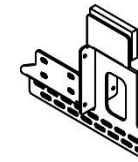


**lang Do / long**  
twin wheels

## Renault Master

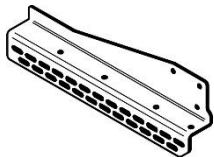


**kurz / short**  
L3 / L4  
twin wheels

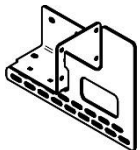

**lang / long**  
L2 / L3 / L4


## Iveco Daily

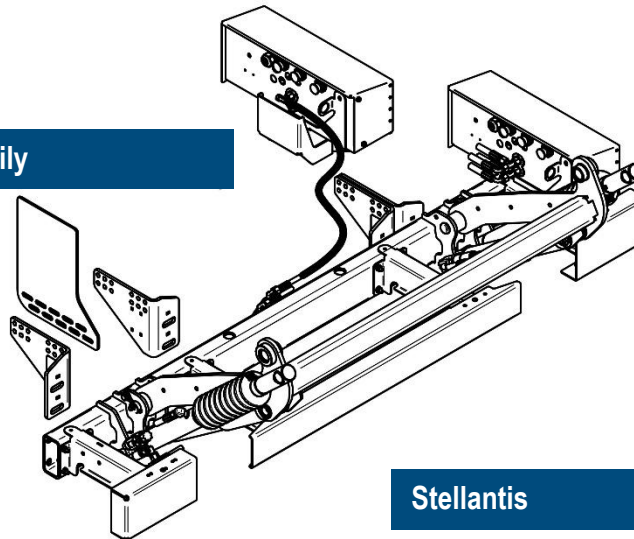


## Stellantis



## Ford Transit

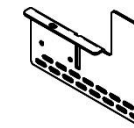

L1 / L2 / L3

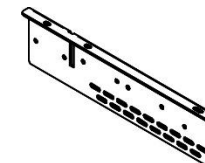

L4 / L5